

## MT2 PART LIST

C1C7C15C21 47n  
 C2 15n  
 C3 C23 100p  
 C4 27n  
 C5 10n  
 C6 33n  
 C8C13 47p  
 C9 C10C28C33C34 10/50  
 C11 15n  
 C12C14C22C24 1/50  
 C16 15n  
 C17 1n5  
 C18 10p  
 C19 10n  
 C20 0.22/50  
 C25 22n  
 C26 8n2  
 C27 100n  
 C31C32 100/16

R1,R3,R7,R9,R10,R14,R20,R23,R42,R43,R46 10k  
 R2,R37,R44 1m  
 R4,R11,R16,R30,R45,R47 100k  
 R5 220k  
 R6,R13,R28,R29, R35,R36 2k2  
 R8,R22,R31,R32 47k  
 R12,R21,R38,R48 1k  
 R15 4k7  
 R17 3k3  
 R18 470  
 R19 470k  
 R24,R25,R26,R27 22k  
 R33,R34 330

D1-D2 1N4148  
 D3 1N4004  
 IC1-IC4 4558  
 Q1 2SK184 (2SK30KA, 2N3819)  
 T1-T4 2SC1815(2SC3378)

DIST 250kA  
 TONE 100KC  
 LV 50kA  
 MID 100kC  
 FREQ 50kCx2